




How To Guide: *Firmware Upgrade*

The Q-Balancer appliance supports manual and auto firmware upgrade.

To manually upgrade the firmware, follow the steps below to complete the process:

1. On the main menu, navigate to **Firmware**.

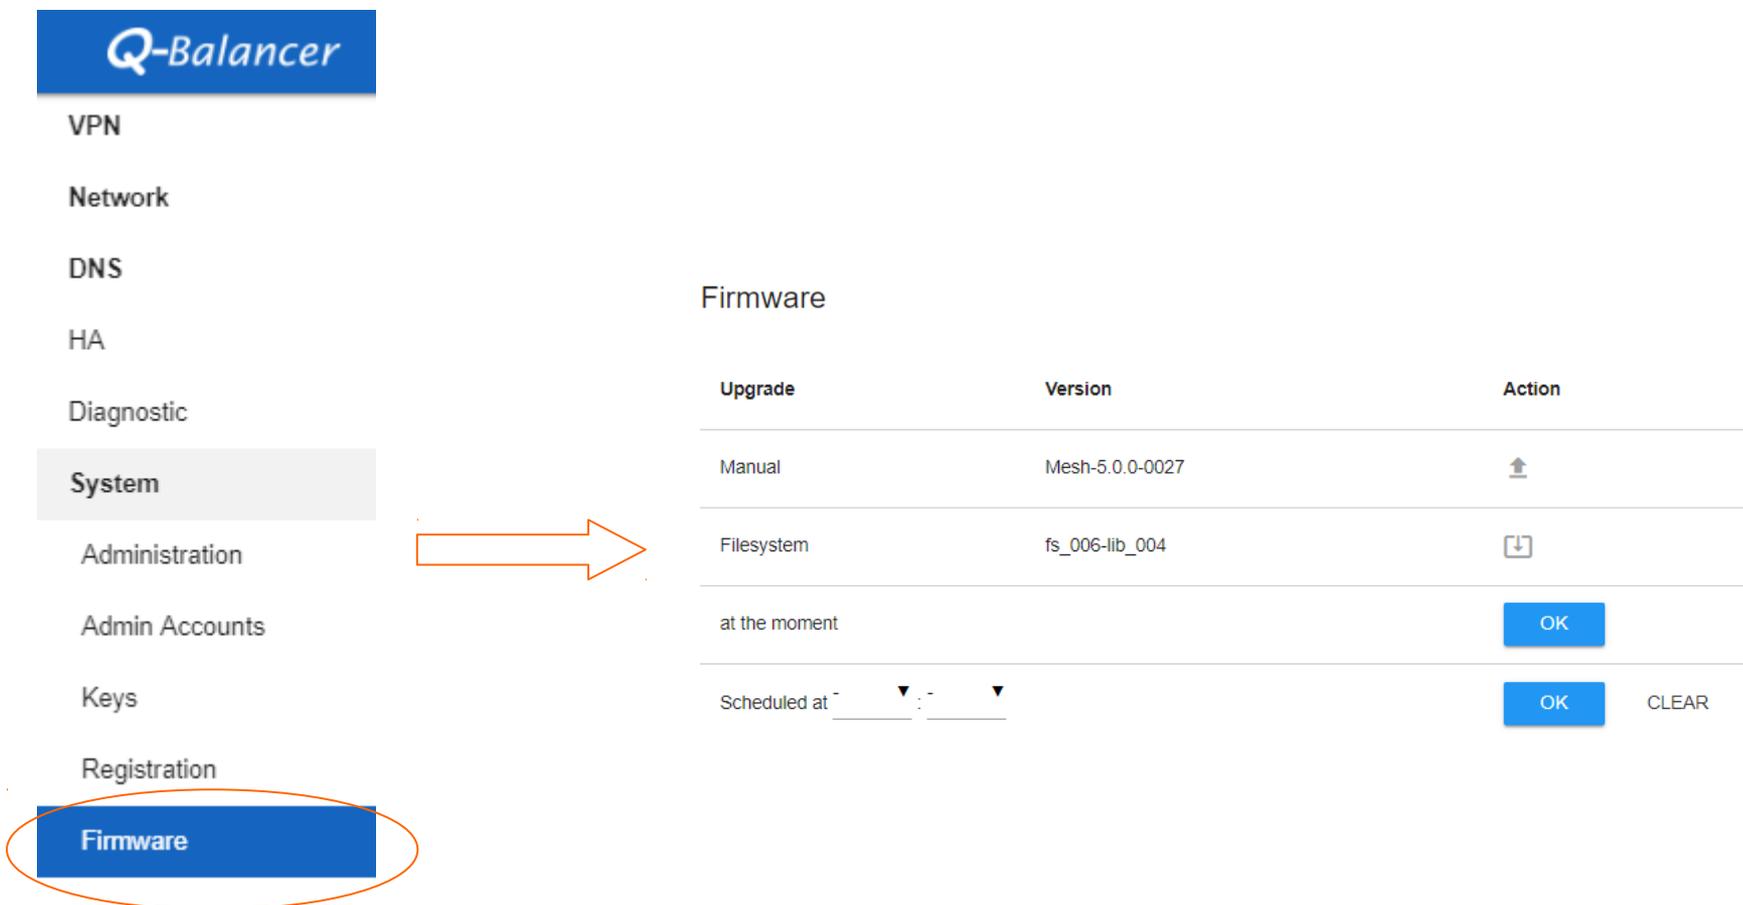

The screenshot shows the Q-Balancer web interface. On the left is a navigation menu with the following items: VPN, Network, DNS, HA, Diagnostic, System, Administration, Admin Accounts, Keys, Registration, and Firmware. The 'Firmware' item is highlighted with a blue background and circled in orange. An orange arrow points from this menu item to the right-hand side of the page.

The right-hand side of the page displays the 'Firmware' configuration page. It features a table with the following structure:


Upgrade	Version	Action
Manual	Mesh-5.0.0-0027	
Filesystem	fs_006-lib_004	
at the moment		<input type="button" value="OK"/>
Scheduled at <input type="text"/> : <input type="text"/>		<input type="button" value="OK"/> <input type="button" value="CLEAR"/>

2. Click on the icon.

Firmware


Upgrade	Version	Action
Manual	Mesh-5.0.0-0027	
Filesystem	fs_006-lib_004	
at the moment		<input type="button" value="OK"/>
Scheduled at <input type="text"/> : <input type="text"/>		<input type="button" value="OK"/> <input type="button" value="CLEAR"/>

3. Select the firmware to be uploaded when it prompts.

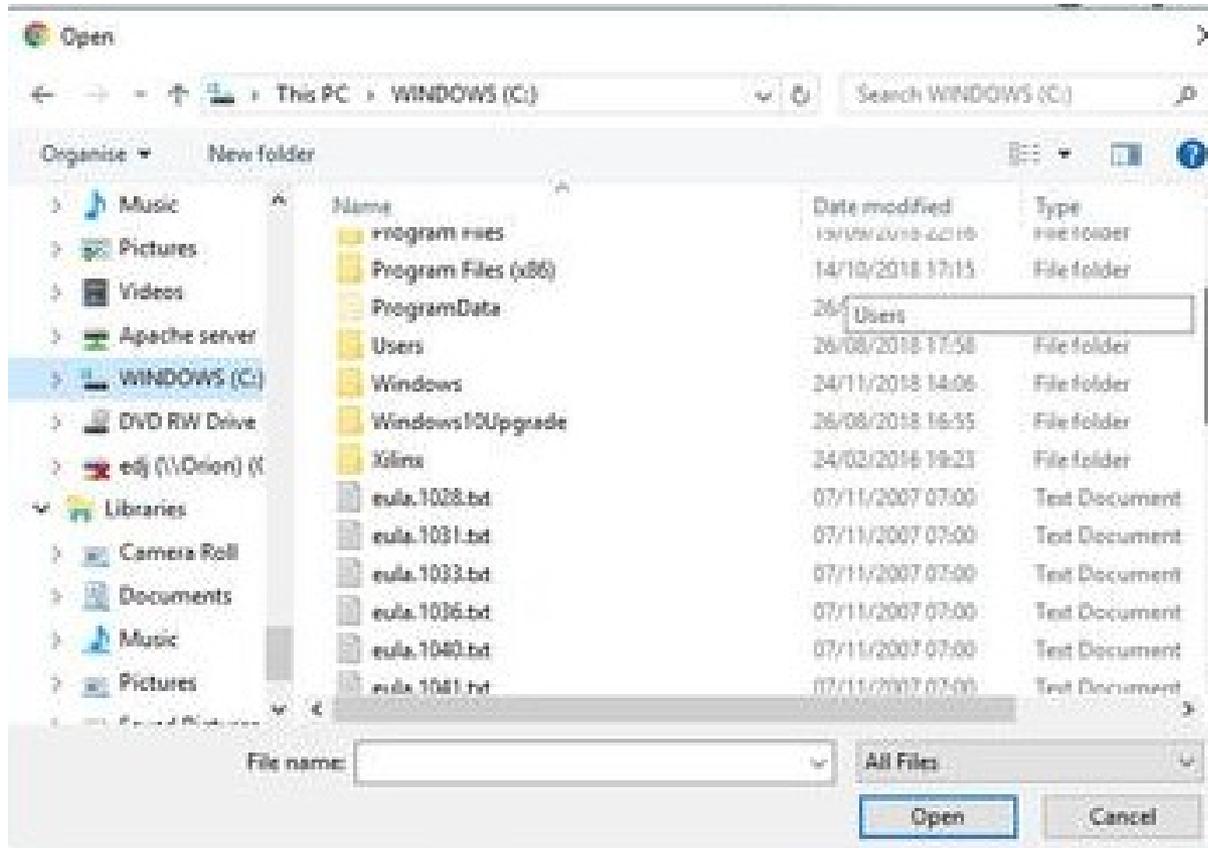

4. Got to *at the moment*, click on **OK**. (No need to reboot unless it prompts to say so.)

Firmware

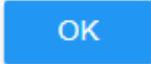Upgrade	Version	Action
Manual	Mesh-5.0.0-0027	
Filesystem	fs_006-lib_004	
at the moment		
Scheduled at <input type="text"/> : <input type="text"/>		 CLEAR

To automatically upgrade the firmware by schedule, follow the steps below to complete the process:

1. Go to ***Schedule at***
2. Choose the time to upgrade, which is in the format of ***HH:MM***
3. Click on ***OK***. (If a reboot is needed, it will prompt to say so.)